

Walk-and-Talk Interactive Board Remote Control

Erase All: all writing, in dry-erase marker or projection mark-up is erased from memory

Previous: page up or previous slide in cursor mode. In pen mode, this button displays a blank canvas

Touchpad: acts as a laptop's touchpad in projection mode. Tap once with the tip of a finger to click, twice to double-click

Cursor/Pen: in projection mode, toggles between cursor and pen mode

Pen Style: press this button in projection mode to choose a new style (color, width, style, and eraser mode)

Print: sends a snapshot of the board to the default printer

Projection: control the computer from the board if the projector is connected to a computer and is focused on the board

Next: page down or next slide in cursor mode. In pen mode, this button returns to the computer screen

Click Trigger (on the other side, not shown): extra button that can be set as a left mouse click or double click

L and R: in projection mode, press L for a left mouse click and R for right mouse click.

Keyboard: displays an on-screen keyboard

Ink Colors

Save: save a snapshot of the board as a file on the computer

