

HOW TO USE THE INTERACTIVE WHITE BOARD THAT DOES NOT HAVE A POWER PROJECTOR ARM ABOVE IT.

- 1) Enter classroom and turn on WALL UNIT CABINET PC. (In white metal box)
- 2) Switch on screen and wait for the PC WINDOWS to completely load.
- 3) During this loading you may hear a sound from the interactive board. Wait. When the light on the left hand side of the board comes on and stays GREEN you are ready to go.
- 4) Take the REMOTE out of the holder and hit PEN button –see remote below with tool tips. **DO NOT PRESS PROJECTION MODE. YOU WILL ONLY PRESS THIS BUTTON WHEN AN ARM PROJECTOR IS PRESENT.**
- 5) Now take ANY ERASER (not stylus pen) and PRESS HARD ON THE SCREEN. You WILL see your edits/marks showing up on the MAIN PROJECTOR screen in the room.

LRC /IT Team.

Walk-and-Talk Interactive Board Remote Control

Erase All: all writing, in dry-erase marker or projection mark-up is erased from memory

Projection: control the computer from the board if the projector is connected to a computer and is focused on the board

Previous: page up or previous slide in cursor mode. In pen mode, this button displays a blank canvas

Next: page down or next slide in cursor mode. In pen mode, this button returns to the computer screen



Touchpad: acts as a laptop's touchpad in projection mode. Tap once with the tip of a finger to click, twice to double-click

Click Trigger (on the other side, not shown): extra button that can be set as a left mouse click or double click

Cursor/Pen: in projection mode, toggles between cursor and pen mode

L and R: in projection mode, press L for a left mouse click and R for right mouse click.

Pen Style: press this button in projection mode to choose a new style (color, width, style, and eraser mode)

Keyboard: displays an on-screen keyboard

Ink Colors

Print: sends a snapshot of the board to the default printer

Save: save a snapshot of the board as a file on the computer



Ohlone College