


# Flip Video Camera – Quick Guide

Any Questions? [LRCe-help@ohlone.edu](mailto:LRCe-help@ohlone.edu)

- Turn **Power** on using **On/Off** button on side of camera. 
- To change settings (date, sounds) press **Red/Record** button as Flip logo appears.



- **To Record:** Press **Red/Record** button. Press the same button to stop recording.
- **To Zoom In and Out while recording:** Touch the lighted + and – buttons above and below the **Red/Record** button.
- **To Play Back Videos:** Touch the **Play/Pause** button (> | |). To move on to the next recorded video, touch the < or > lighted arrows to the left and right of the **Red/Record** button.
- **To Delete Videos:** Touch the **Trashcan** icon button, select “Yes” to confirm, then select the **Play/Pause** button (or > | |) which is also **OK**.
- **Computer Transfer/Recharging:** Connect to computer by sliding the button on the side to release the USB port. This will allow you to transfer videos. This is also how the Flip is recharged.

**Tip:** Flip comes with software that guides you through **sharing, adding titles, music,** etc.

For more information, visit [http://www.theflip.com/support\\_video.shtml](http://www.theflip.com/support_video.shtml)