

Sony Cyber-Shot Digital Camera - User Guide

Any Questions? LRCE-help@ohlone.edu




Step 1: Check Contents

- 1-Cyber-shot camera
 - 1-Sony G battery
 - 1-USB AV Transfer cable
 - 1-Battery Charger
 - 1-Memory Pro Card 1GB
 - 1-Manual
 - 1-CD-ROM Cyber-shot application software (DO NOT Register)
- Note: You can also opt to use your own photo editing software.



Step 2: Charge Battery and Locate Memory Card

- Place memory card in slot shown, and place battery in slot shown, DO NOT force open or close door.
- Make note of USB cable connector to be used to transfer photos to computer and also to view photos on television.
- Also note Tripod use connector. (Optional)

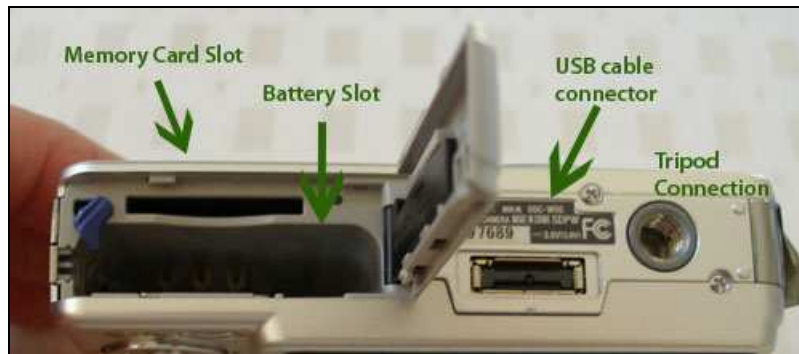

Step 3: Turn On Power of Camera


- Use the shutter button to take pictures and the W-T buttons to zoom in and out. (The Shutter button is the same button with the Wide Zoom button)

Note: Microphone is for video captures, video capture is described in manual on pg. 14.



Step 4:

- To take your pictures or movie, use the mode dial to select photo or movie. The full mode dial key is on pg. 15 in the manual. Some of the basics are shown below.

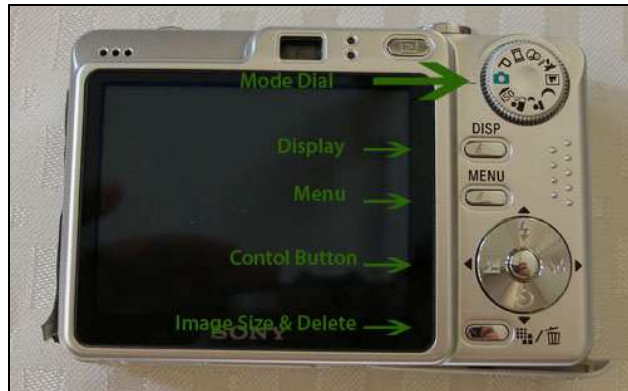

Mode Dial Key

Selecting the mode dial	
Set the mode dial to the desired function.	
	Auto Adjustment Allows easy shooting with the settings adjusted automatically.
	Program Auto Allows you to shoot with the exposure adjusted automatically (both the shutter speed and the aperture value). Also you can select various settings using the menu.
	Movie Record movie with sound.
	High Sensitivity Shoot images without a flash even in low lighting.
	Soft Snap Shoot a person's skin with a warmer look.
	Twilight Portrait Shoot sharp images of people in a dark place without losing the nighttime atmosphere.
	Twilight Shoot night scenes without losing the nighttime atmosphere.
	Landscape Shoot with the focus on a distant subject.
	Beach Shoot seaside or lakeside scenes with the blueness of the water captured more vividly.

Step 5:

- Use the DISP button to show images in the LCD screen.

Step 6:

- Transfer photos to your computer using the transfer AV cable, now your pictures are ready to use.

For more information, refer to the print Instruction Manual or CD included with the camera.